


TITAN CLOCKS

User Manual: Pendulum clocks with chime

①

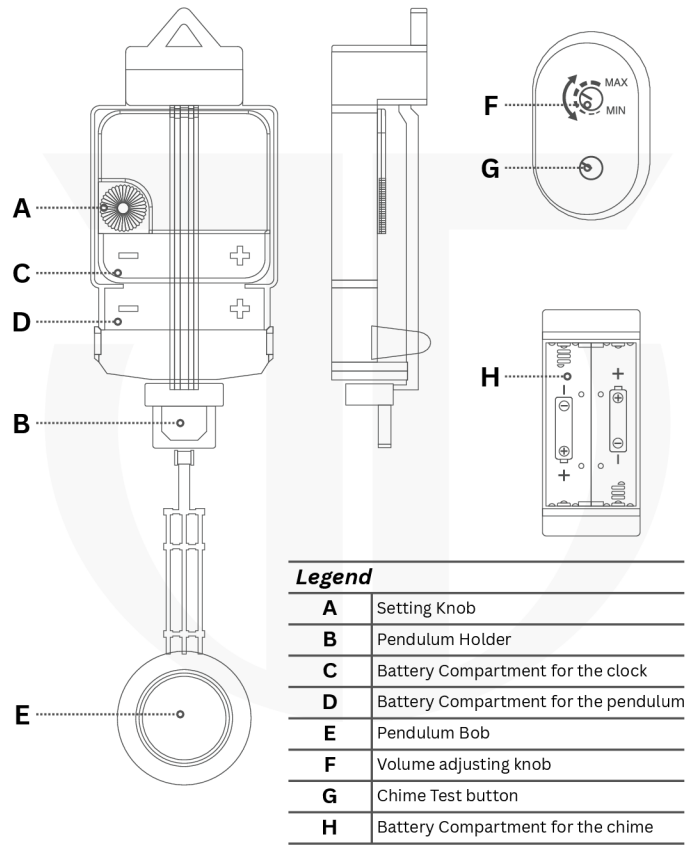

(Insert four AA batteries first)

②

Chime

This timepiece plays a Westminster chime melody on the hour and has an automatic shut off. The clock does not chime between 10:00 p.m and 6:00 a.m. To ensure that your clock functions correctly, please follow the time and chime setting precisely. The clock will chime during the day and will automatically turn off at night.

1. Pull upwards on the back panel.
2. BEFORE inserting the batteries, set the clock to 5:50 AM.
3. Insert 1 AA battery into the clock battery chamber according to the positive (+) and negative (-) symbols.
4. Insert 2 AA batteries into the chime battery chamber according to the positive (+) and negative (-) symbols. Make sure the batteries are secure in the holder. The clock will chime automatically 6 times.
5. Now turn hands (using the knob) slowly to the present hour (in a clockwise direction). Remember that the clock started at 6:05 in the morning. If setting at night, for example to 9:20 p.m., the hands should be turned thus: 7, 8, 9, 10, 11, 12, 1, 2, 3, 4, 5, 6, 7, 8, 9, and then 9:20. The last strike you will hear will be 9 times.

Note: When moving hands to the present time the clock will begin chiming. Do not be concerned about this. The last strike you hear after setting the clock at the appointed time will be the correct one.

6. When replacing the batteries, remember that all the above must be repeated from point one, and the clock must be started again at 5:50 a.m. Therefore, please keep these instructions as a reminder. By the time the batteries should be replaced, you may have forgotten how to set the clock.
7. To operate without the chimes, remove the two batteries from the chime battery chamber.
8. Never turn clock hands counter-clockwise as it will interrupt the chime sequence and damage the clock.

③

Note: When batteries are low, the chimes will not remain coordinated with the time on the clock. When this happens, replace with new batteries and reset the clock as listed above.

Setting The Pendulum

1. For transport security, the small black plastic pendulum (B) may be attached to the case to prevent it from swinging.
2. At (D) using thumb pressure, push towards your right to release the pendulum and allow it to swing freely.
3. Attach main pendulum to black pendulum holder. The bright side of the pendulum bob faces the front of the clock.
4. Give main pendulum a push sideways to get it swinging.

Setting Time & Melody

1. Before inserting the batteries, set the time on your clock to 5:50 by turning the hand setting knob on the movement. Now the time is 5:50AM. When the batteries are inserted the melody function is automatically set for 6:00 AM.
2. Insert the batteries according to the + and - marking in the battery compartment (H). The two AA batteries go on either side.
3. To set the time & melody turn the hands clockwise. If the present time is P.M. make sure the hour hand passes through the 12:00 position until the desired time is reached. While setting the time you will hear the movement chiming - this is normal. Once the time is set the melody will automatically correct itself.
4. This clock has morning-control function, which means from 6 AM to 9 PM, the music will display hourly; from 10 PM to 5 AM, it will be auto mute.
5. Test Button (G) – is to test the function of music.

4

Setting up Pendulum for clocks

6. Unlock the pendulum holder from its shipping position by gently sliding the pendulum out of its holder and to the right until it hangs freely.
7. Hook the pendulum bob (E) on to the pendulum holder(B). The bright side of the pendulum bob faces the front of the clock.
8. Insert one new battery 1.5 V AA in each of the two battery compartments, polarity as illustrated.
9. Set the actual time by turning the setting knob(A) at the back.
10. With the built-in hanging slot you can x the pendulum clock with nail or solid screw and dowel on a wall.
11. Gently nudge the pendulum to start it swinging.

Attention: *If the pendulum won't swing or swings irregularly, please check if your pendulum clock hangs vertically. If necessary use water level.*

Trouble Shooting

Clean with a soft cloth. Do not use any solvents or abrasive cleaning agents.

Volume Control

The volume of the chime can be modified by turning the Volume Control knob.

5


Trouble Shooting

Problem	Solution
Clock hands do not move	1. Change the battery in the upper compartment 2. Ensure battery polarity is correct
No movement of the pendulum	1. Place the clock in upright position 2. Change the battery in the lower compartment 3. Ensure battery polarity is correct
Incorrect indication	1. If clock slows down or stops it indicates low battery. In such cases replace the battery immediately. Do not leave a low or dead battery in the clock. Replace the old battery with a new AA battery. Alkaline battery is recommended. Zinc batteries can also be used. Do not use rechargeable batteries.

TITAN CLOCKS

User Manual: Pendulum clocks with chime

①

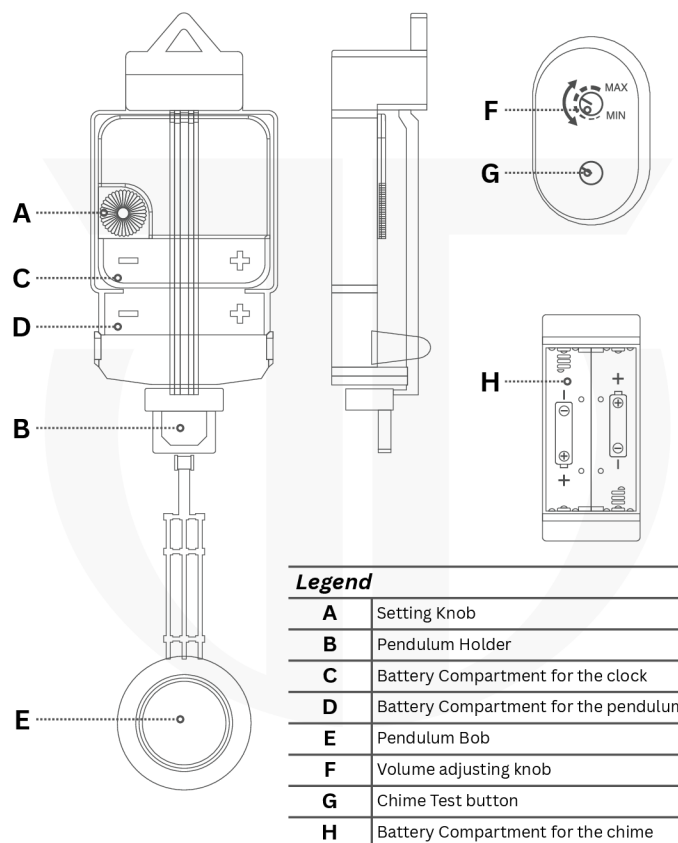

(Insert four AA batteries first)

②

Chime

This timepiece plays a Westminster chime melody on the hour and has an automatic shut off. The clock does not chime between 10:00 p.m and 6:00 a.m. To ensure that your clock functions correctly, please follow the time and chime setting precisely. The clock will chime during the day and will automatically turn off at night.

1. Pull upwards on the back panel.
2. BEFORE inserting the batteries, set the clock to 5:50 AM.
3. Insert 1 AA battery into the clock battery chamber according to the positive (+) and negative (-) symbols.
4. Insert 2 AA batteries into the chime battery chamber according to the positive (+) and negative (-) symbols. Make sure the batteries are secure in the holder. The clock will chime automatically 6 times.
5. Now turn hands (using the knob) slowly to the present hour (in a clockwise direction). Remember that the clock started at 6:05 in the morning. If setting at night, for example to 9:20 p.m., the hands should be turned thus: 7, 8, 9, 10, 11, 12, 1, 2, 3, 4, 5, 6, 7, 8, 9, and then 9:20. The last strike you will hear will be 9 times.

Note: When moving hands to the present time the clock will begin chiming. Do not be concerned about this. The last strike you hear after setting the clock at the appointed time will be the correct one.

6. When replacing the batteries, remember that all the above must be repeated from point one, and the clock must be started again at 5:50 a.m. Therefore, please keep these instructions as a reminder. By the time the batteries should be replaced, you may have forgotten how to set the clock.
7. To operate without the chimes, remove the two batteries from the chime battery chamber.
8. Never turn clock hands counter-clockwise as it will interrupt the chime sequence and damage the clock.

③

Note: When batteries are low, the chimes will not remain coordinated with the time on the clock. When this happens, replace with new batteries and reset the clock as listed above.

Setting The Pendulum

1. For transport security, the small black plastic pendulum (B) may be attached to the case to prevent it from swinging.
2. At (D) using thumb pressure, push towards your right to release the pendulum and allow it to swing freely.
3. Attach main pendulum to black pendulum holder. The bright side of the pendulum bob faces the front of the clock.
4. Give main pendulum a push sideways to get it swinging.

Setting Time & Melody

1. Before inserting the batteries, set the time on your clock to 5:50 by turning the hand setting knob on the movement. Now the time is 5:50AM. When the batteries are inserted the melody function is automatically set for 6:00 AM.
2. Insert the batteries according to the + and - marking in the battery compartment (H). The two AA batteries go on either side.
3. To set the time & melody turn the hands clockwise. If the present time is P.M. make sure the hour hand passes through the 12:00 position until the desired time is reached. While setting the time you will hear the movement chiming - this is normal. Once the time is set the melody will automatically correct itself.
4. This clock has morning-control function, which means from 6 AM to 9 PM, the music will display hourly; from 10 PM to 5 AM, it will be auto mute.
5. Test Button (G) – is to test the function of music.

4

Setting up Pendulum for clocks

6. Unlock the pendulum holder from its shipping position by gently sliding the pendulum out of its holder and to the right until it hangs freely.
7. Hook the pendulum bob (E) on to the pendulum holder(B). The bright side of the pendulum bob faces the front of the clock.
8. Insert one new battery 1.5 V AA in each of the two battery compartments, polarity as illustrated.
9. Set the actual time by turning the setting knob(A) at the back.
10. With the built-in hanging slot you can x the pendulum clock with nail or solid screw and dowel on a wall.
11. Gently nudge the pendulum to start it swinging.

Attention: *If the pendulum won't swing or swings irregularly, please check if your pendulum clock hangs vertically. If necessary use water level.*

Trouble Shooting

Clean with a soft cloth. Do not use any solvents or abrasive cleaning agents.

Volume Control

The volume of the chime can be modified by turning the Volume Control knob.

5

Trouble Shooting

Problem	Solution
Clock hands do not move	1. Change the battery in the upper compartment 2. Ensure battery polarity is correct
No movement of the pendulum	1. Place the clock in upright position 2. Change the battery in the lower compartment 3. Ensure battery polarity is correct
Incorrect indication	1. If clock slows down or stops it indicates low battery. In such cases replace the battery immediately. Do not leave a low or dead battery in the clock. Replace the old battery with a new AA battery. Alkaline battery is recommended. Zinc batteries can also be used. Do not use rechargeable batteries.